

Digital Satellite Receiver
Personal Video Recording

User's Manual

9300 USC



SuperMax

INDEX

INDEX	3
Precautions.....	5
1. Important Safety Instructions.....	5
2. Notice	5
Before You Begin	7
1. Main Features	7
2. Accessories	8
Hardware Description	9
1. Front Panel Configuration	9
2. Rear Panel Configuration	10
3. Remote Control Unit.....	11
Connections Diagram	14
1. Receiver to TV with RF	14
2. Receiver to TV and VCR.....	15
3. Receiver to Digital Audio Equipment.....	16
4. Connecting to Dish	17
Guide of Functions	18
1. Selecting a Service.....	18
1.1 Using CH UP/DOWN buttons.....	18
1.2 Using NUMERIC buttons	18
1.3 Using Service List	18
2. Information Window.....	18
3. Multi-Picture Display.....	18
4. Electronic Program Guide (EPG)	19
5. Satellite List	19
6. Favorite Group	19
7. Volume Control.....	19
8. Pause	19
9. Subtitle.....	19
10. Audio Track	19

PVR (Personal Video Recorder) Function	20
1. Recording	20
1.1 Recording methods	20
1.2 Instant Recording	21
1.3 Recording Edit.....	21
1.4 Long Time Recording	21
1.5 Pause during Recording.....	22
2. Time Shifting	23
3. Playback (Play List)	24
4. Bookmark	24
5. Trick mode	25
Guide of Main Menu	26
1. Configuration	26
1.1 Time Setting	26
1.2 Timer Manager	26
1.3 UI (User Interface) Setting	27
1.4 Parental Control	27
1.5 Language Setting	28
1.6 A/V Output Setting	28
2. Installation	28
2.1 Dish Setting	28
2.2 Positioner Setting	29
2.3 Service Search	30
2.4 System Recovery	31
2.5 System Information	31
3. Utilities	31
3.1 USB	31
3.2 Data Transfer.....	32
3.3 Recording Option	32
3.4 Calendar.....	32
3.5 Calculator	32
3.6 Game.....	32
4. CA.....	33
4.1 Conax smart card menu.....	33
4.2 Smart card information.....	33
5. Service List	34
5.1 Service List manager	34
5.2 Service List Option	35
Troubleshooting	36
Specifications	37

Precautions

1. Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not reverse the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING : *To Prevent fire or shock hazard do not expose the set to rain or moisture.*

2. Notice

- Do not attempt to service this product by yourself. Do not remove the cover. Refer all servicing to qualified service agents.
- These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mains plug is used as the disconnect device. The disconnect device shall remain readily operable.



To reduce the risk of electric shock, do not remove the cover (or back).

No user serviceable parts are inside.

Refer servicing to qualified service personnel.



The Lightning Flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product

Before You Begin

1. Main Features

- ✓ **Digital Satellite Receiver**
- ✓ **Time Shifting with External USB 2.0 Devices (Max. 2 Hours)**
- ✓ **Recording & Playback with External USB 2.0 Devices**
- ✓ **Recording and Time Shifting Simultaneously**
- ✓ **Recording and Playback Simultaneously**
- ✓ **Event Recording by EPG**
- ✓ **USB 2.0 Host Support(MP3 Player & JPEG Viewer)**
- ✓ **Software & Channel Database Transfer via USB**

- ✓ MPEG-II Digital & Fully DVB Compliant
- ✓ Blind scan
- ✓ Multi-LNB Controlled by DiSEqC Control Version 1.0, 1.1, 1.2 and USALS
- ✓ Multi-Satellite Search
- ✓ Support EPG (Electronic Program Guide)
- ✓ On-Screen Display with 65535 Color Full Resolution
- ✓ Favorite Channel Groups
- ✓ Powerful Channel Control by Favorites, Lock, Skip, Move and Delete
- ✓ Multi-language Supported (OSD & Menu)
- ✓ Teletext Support
- ✓ Maximum 10,000 channels Programmable
- ✓ Multi-picture Display
- ✓ Parental Lock / System Lock / Installation Lock
- ✓ CVBS Video & Audio Output via RCA
- ✓ CVBS, RGB Video & Audio Output via TV SCART

2. Accessories

User's Manual



Remote Control



AAA size Batteries X2




RCA Cable



NOTE : If any accessories listed above are missing, contact the sales representative where you purchased this unit.


Hardware Description

1. Front Panel Configuration

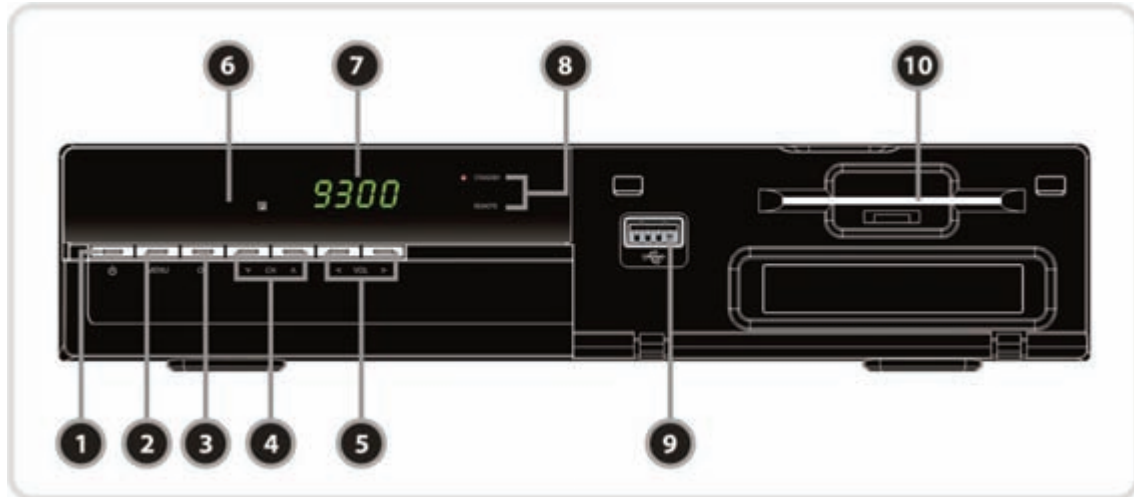


1. **POWER BUTTON** : Press to switch between STANDBY and POWER ON modes.
2. **Menu BUTTON**: Press to enter the main menu or to move to the previous menu.
3. **OK BUTTON**: Press to display the service list in non-menu mode and to select an item or confirm in menu mode.
4. **CH Up/Down BUTTON**: Press to change services in normal mode or to move highlighted-bar in menu mode.
5. **Vol Up/Down BUTTON**: Press to change audio volume in normal mode or to navigate menu in menu mode.
6. **Remote Sensor** : Receives signal from remote controller.
7. **Display** : The 4-digit shows service number or menu state in normal mode. Show local time in standby mode.
8. **STANDBY Indication LED(RED)** : The LED lights on in standby mode.
REMOTE Indication LED(GREEN) : The LED lights on when a key on the Remote Control is pressed.
9. **USB (Front)** : Use it when connecting to external USB storage device.
10. **SMART Card Reader** : Insert smart card for encrypted service access.

2. Rear Panel Configuration

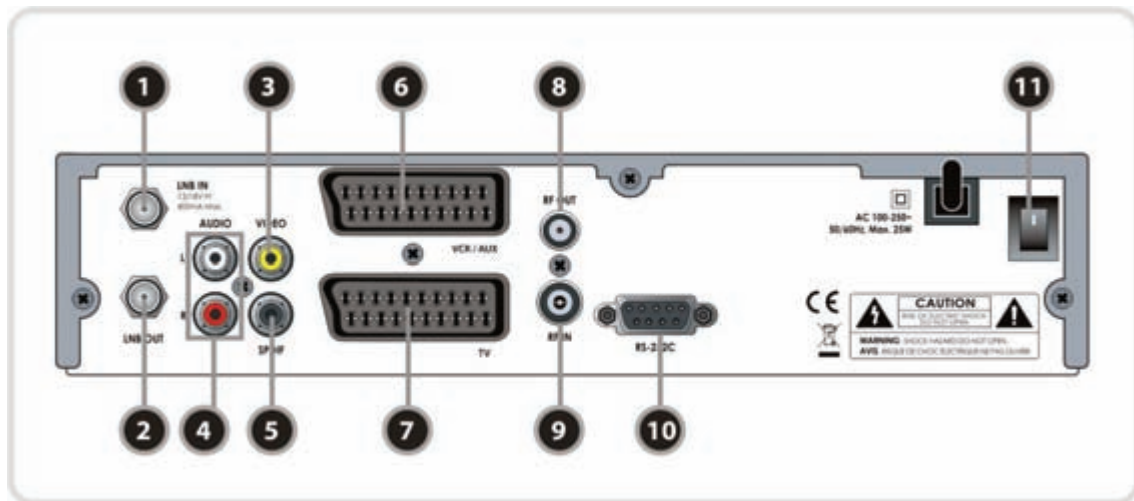


1. **LNB IN :**
Use to connect a satellite antenna.
2. **LNB OUT :**
Use it when connecting to another STB for loop-through.
3. **VIDEO :**
Use to connect to video input of TV or VCR.
4. **AUDIO L/R :**
Use to connect audio left, right of TV or VCR.
5. **SPDIF :**
Use to connect SPDIF to digital audio equipment.(Optic)
6. **VCR SCART:**
Use to connect to the VCR via a SCART cable.
7. **TV SCART:**
Use to connect to the TV via a SCART cable.
8. **RF OUT :**
Use to connect to RF(ANT) input jack of TV.
9. **RF IN :**
Use to connect a general Aerial Antenna.
10. **RS-232C :**
Use it when connecting to your PC.
11. **POWER:**
Power switch

3. Remote Control Unit

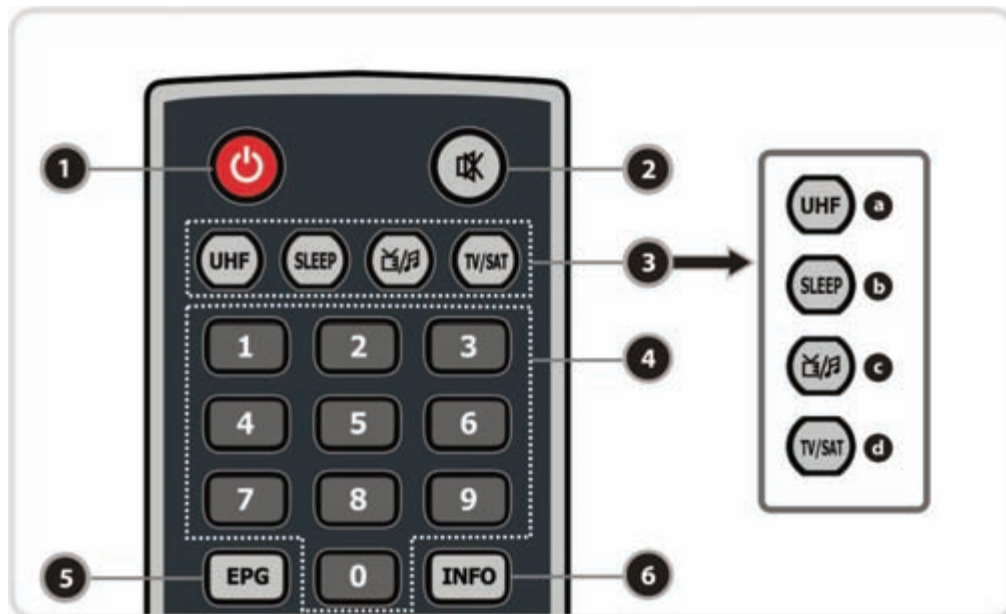

1. **POWER** : Turns the STB On/Off.
2. **MUTE** : Turns the sound On/Off.
3. **MODE**
 - a. **UHF** : To adjust UHF service.
 - b. **SLEEP** : To adjust sleep timer.
 - c. **TV/STB** : Toggles the TV output source between the cable input(STB mode) and UHF/VHF antenna input(TV mode).
 - d. **TV/RADIO** : Switches between TV and Radio.
4. **NUMERIC Keys** : Controls the numerical operation and service numbers directly.
5. **EPG(Electronic Program Guide)** : Show the TV/Radio program guide.
6. **INFO** : Shows the information of the current program. If you press one more, detail information box will be shown.

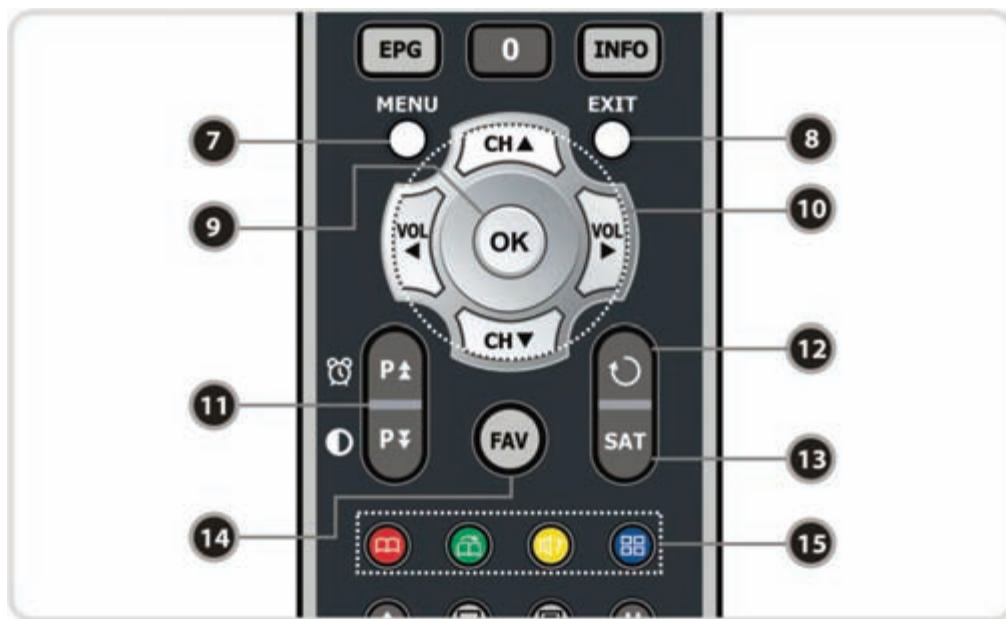

7. MENU : To enter the main menu or to move to the previous menu.

8. EXIT : Exit from the menu or pop-up window.

9. OK : Shows the service list in non-menu mode and select an item or confirm in menu mode.

10. ARROW : Moves the highlight bar for selecting options on the menus. And this key is used to change services(UP/DOWN) or change audio volume(LEFT/RIGHT).


11. PAGE UP/DOWN : Move to the next or previous page if more than one page are available. PAGE UP key is also used as hot-key to move to Timer Manager menu(Refer to Page 26, **1.2 Timer Manager**). And PAGE DOWN key is also used as hot-key to move to Picture Adjust window(Refer to Page 28, **1.6 A/V Output Setting**).

12. RECALL : Moves to previous service.

13. SAT : Shows the service list

14. FAV : To change the favorite groups.

15. COLOR Keys : Used for special function in menu. **RED** key is used to add or delete the current position as a bookmark. **GREEN** key is used to go to the next bookmark position. **BLUE** key is used to display multiple pictures.

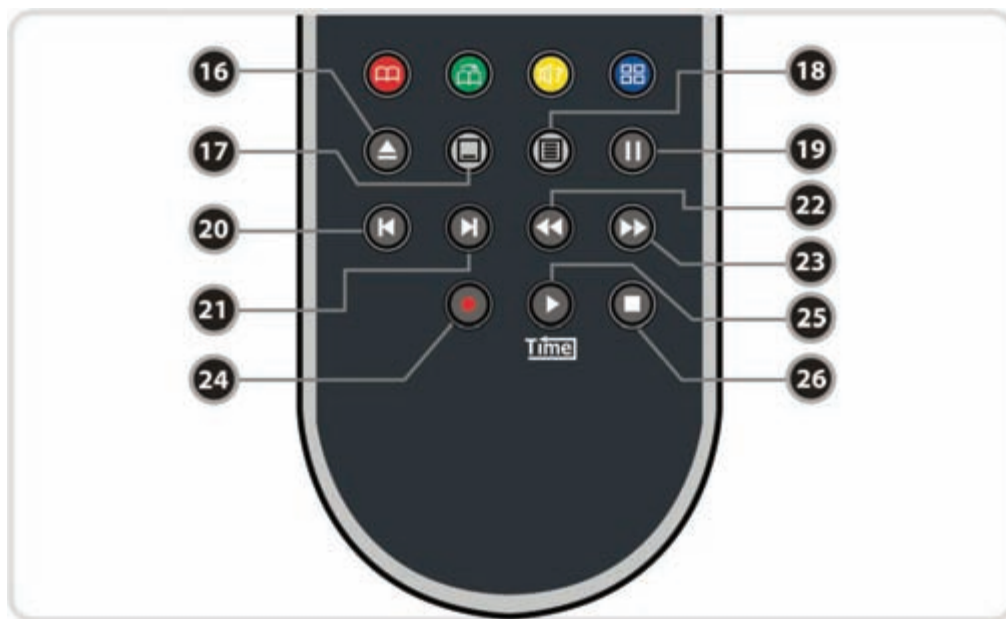

16. PLAY LIST : To display recorded service list.

17. SUBTITLE : To show multilingual subtitle.

18. TELETEXT : To show the digital teletext.

19. PAUSE : This key is used to pause the video. Press once more to resume the video.

20. PREV FILE : To play the previous MP3 file in MP3 play mode.

21. NEXT FILE : To play the next MP3 file in MP3 play mode.

22. REWIND : Rewind when the progress bar is displayed. Start reverse playback. Change the speed of reverse playback.

23. FAST FORWARD : Start fast forward or fast motion playback. Change the speed of forward playback.

24. RECORD : To start recording.

25. PLAY : Display the progress bar of playback when no progress bar is displayed. Start playback with normal speed. Return to normal speed from trick mode.


26. STOP : To stop time shifting, play back or recording.

NOTE : When inserting batteries, make sure that the polarity (+/-) is correct.

Connections Diagram

1. Receiver to TV with RF


- Connect the satellite antenna cable to LNB IN.
- Connect the TV antenna to RF IN.
- Connect the RF OUT to RF IN of TV.
- Connect the VIDEO and AUDIO L, R to VIDEO IN and AUDIO L, R IN of TV.
- Connect the TV SCART to SCART of TV.

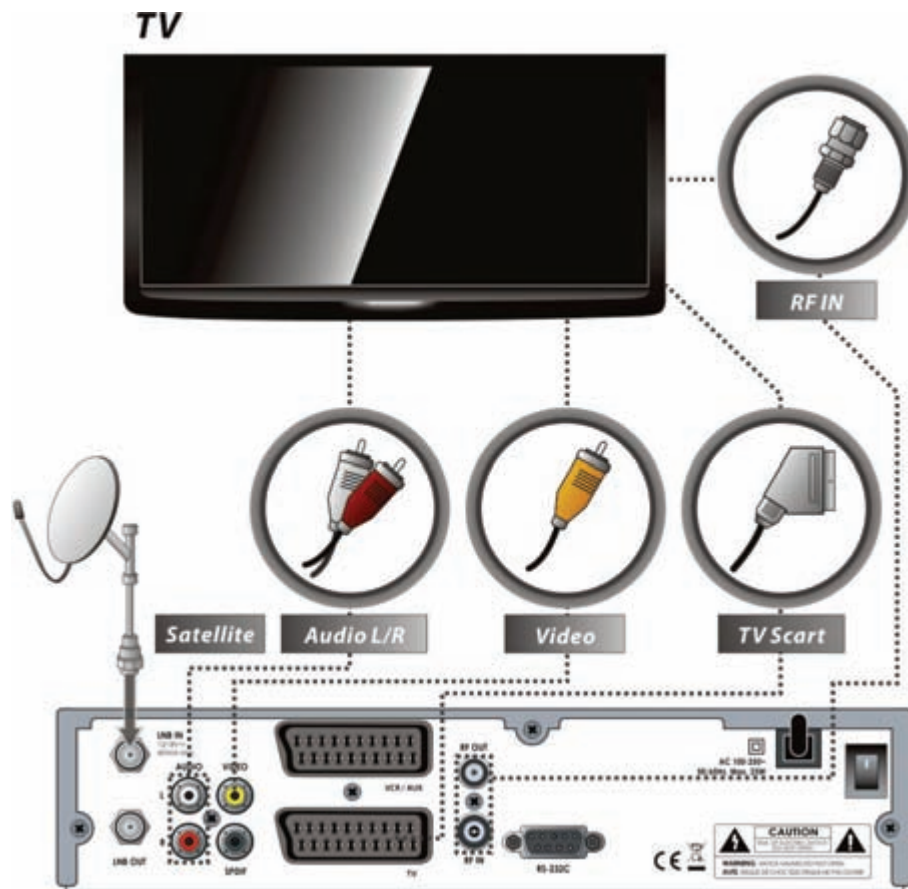

2. Receiver to TV and VCR

- Connect the satellite antenna cable to LNB IN.
- Connect the TV antenna to RF IN.
- Connect the RF OUT to RF IN of VCR.
- Connect RF OUT of VCR to RF IN of TV.
- Connect the TV SCART to SCART of TV.
- Connect the VCR SCART to SCART of VCR.
- Connect other jacks to the appropriate jacks of TV refer to above section, **1. Receiver to TV with RF.**

- ## 2. Receiver to TV and VCR
- Connect the satellite antenna cable to LNB IN.
 - Connect the TV antenna to RF IN.
 - Connect the RF OUT to RF IN of VCR.
 - Connect RF OUT of VCR to RF IN of TV.
 - Connect the TV SCART to SCART of TV.
 - Connect the VCR SCART to SCART of VCR.
 - Connect other jacks to the appropriate jacks of TV refer to above section, **1. Receiver to TV with RF.**

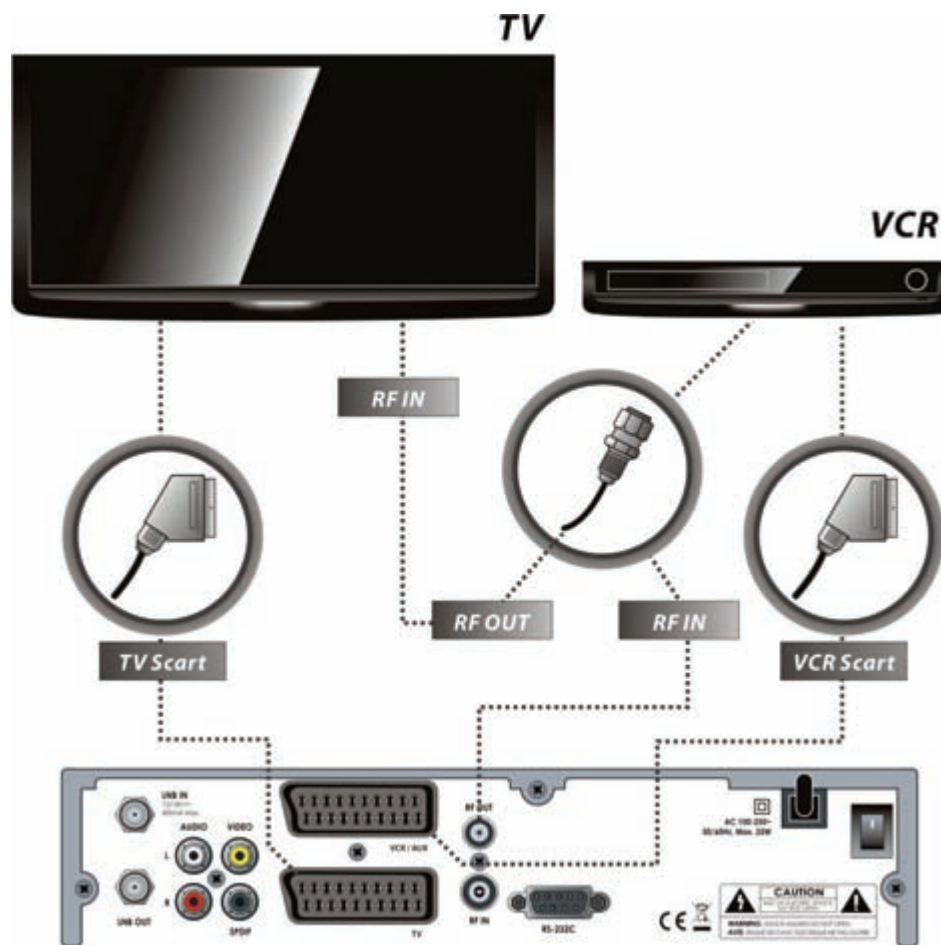

3. Receiver to Digital Audio Equipment

- To get better quality audio, you can use digital audio via coaxial cable.
If you have a digital audio equipment, connect SPDIF to Digital audio input of the equipment.
- Connect other jacks to the appropriate jacks of TV or VCR refers to above sections,
1. Receiver to TV with RF and 2. Receiver to TV and VCR.




4. Connecting to Dish

- Using Single DISH : Connect the Satellite Antenna cable to LNB IN.



- Using DiSEqC switch : Connect the cable of DiSEqC switch to LNB IN.

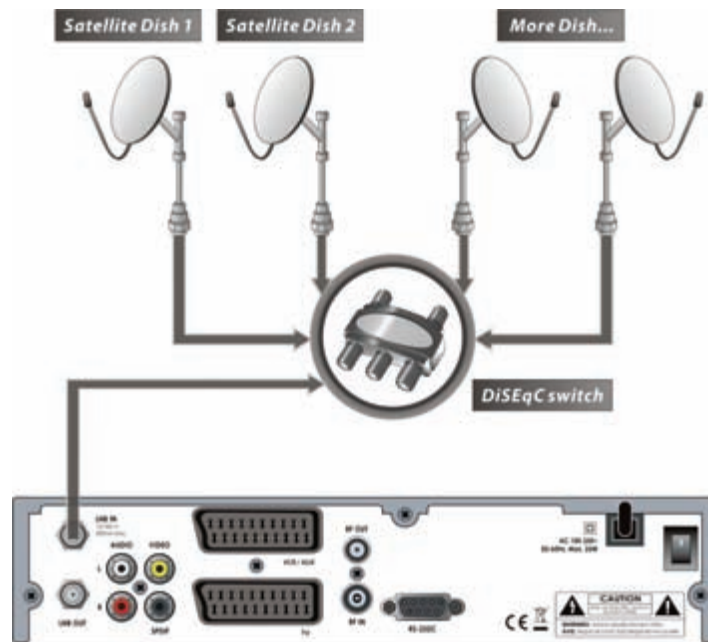

- Using DiSEqC motor : Connect the cable of DiSEqC motor to LNB IN.



Guide of Functions

1. Selecting a Service

To select the desired service, you can use below methods.

1.1 Using CH UP/DOWN buttons

You can navigate between services using **UP/DOWN** buttons. Whenever you press the **UP(DOWN)** button, current service will be changed to next(previous) service. You have to press **UP** or **DOWN** button until find the service you want.

1.2 Using NUMERIC buttons

If you know the service number, enter the number directly using **NUMERIC** buttons.

1.3 Using Service List

To select the desired service in the service list, you should firstly display the service list using **OK** button.

Use **ARROW** buttons to select a desired service and press **OK** button.

In the Service List window, you can also use additional functions with **COLOR** buttons.

Press **RED** button, you can sort the services by Alphabet, Transponder, Group and CAS.

Press **GREEN** button, you can add the service to one of 10 favorites.




2. Information Window

If you want to view the current service information window press **INFO** button. Then the Information window will appear.

This Information window is automatically displayed when changing services. This window contains many items such as service number, service name, scrambled service, Teletext, subtitle, Dolby Digital symbol, duration time and so on.

Press **INFO** button once more, you can get more detailed information.

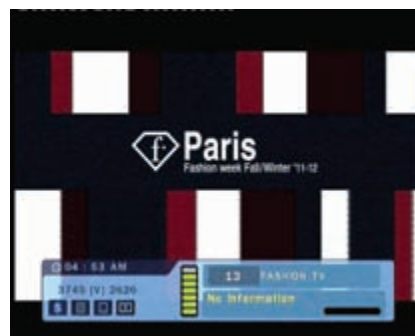

3. Multi-Picture Display.

Press the **BLUE** button to display multiple pictures and **RED** button display 9 or 12 multiple pictures option.



4. Electronic Program Guide (EPG)

Electronic Program Guide (EPG) helps you navigate through all the possible viewing options.

The EPG supplies information such as program listings, start/end times and detailed information about the program listings for all available services. The availability and amount of these program details will vary, depending on the particular broadcaster.

- If you press **EPG** button, EPG menu will be displayed.
- Press the **ARROW** buttons to move to other service or to see previous/next guide.
- Press **EPG** button once to view full EPG (Entertainment Program Guide) and press button twice to view only selected EPG. Press button consecutively to go back and forth.
- Press **GREEN** button to view next day EPG and **RED** button to view EPG for previous day.
- Select the program by using the **ARROW** buttons then set the timer by pressing **OK**.
- You can make a reservation for recording on EPG menu.
 - Press **RECORD** button to reserve the event. This reservation can be checked under the Timer Manager Menu.
 - To cancel the reservation for recording by **OK** button at the appointed event.
 - To edit the reservation for recording by **RECORD** button at the appointed event.



5. Satellite List

Select the **SAT** (satellite) button to view all satellite listings. Scroll through the various satellites using the **ARROW** buttons, and select the appropriate satellite by pressing **OK**

6. Favorite Group

Select the **FAV** (favorite) button to view all favorite groups. Scroll through the various favorite group using the **ARROW** buttons, and select the appropriate satellite by pressing **OK**.

7. Volume Control

- To control audio volume while you are watching a service, press **LEFT/RIGHT** button to control volume.
- Volume control bar will be appeared in top of the screen.
- When necessary, press **MUTE** button to turn audio sound on/off.

8. Pause

The **PAUSE** button is used to freeze the video. Press **PAUSE** button once more to resume the video.

9. Subtitle

To display Sub-title press **SUBTITLE** button on your remote control. Sub-title is based on the transmitted data.

10. Audio Track

You can select the audio language list by pressing the **AUDIO** button. Use the **ARROW** buttons to choose the audio track from the list than press **OK** to change.

PVR (Personal Video Recorder) Function

1. Recording

1.1 Recording methods


There are two types of recording method.

(**Time Reserved Recording** / **Event Reserved Recording**).


- **Time Reserved Recording :**

- In Timer Manager you may set your time/program during this process.

(**Main Menu > Configuration > Timer Manager**)

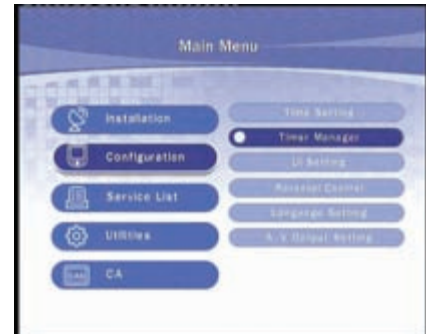

- Press **GREEN** button to activate the new timer edit screen.
- Timer Edit screen you may choose start date/time, duration, service, mode, type (Recording/Play) and simply press **Yes** button to reserve your recording schedule. Also, you must set your start time and end time to minimum of 3 minutes; start time must be present time.

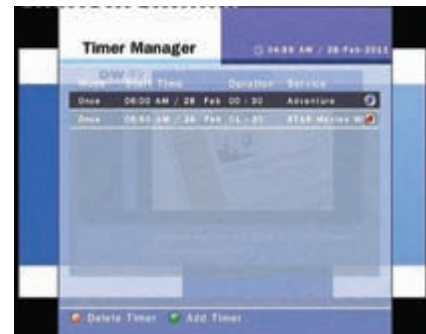

- **Event Reserved Recording :**

EPG screen choose the event you wish to reserve or record.

- During LIVE TV press **EPG** button to access EPG screen.




- Go to the event which you wish to view and then press **OK**. The event will be reserved with BLUE play icon. This BLUE play icon means that you want to just watch the event at the reserved time.

BLUE play icon



- Press the **OK** one more time then the event will be reserved with RED record icon. This RED record icon means that you want to record the event at the reserved time.

RED record icon

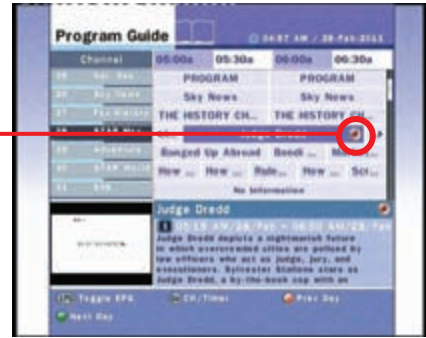


- When you set an event for recording in EPG. It automatically set in the Timer Event in **Main Menu > Configuration > Timer Manager**.



1.2 Instant Recording

At anytime, you may press **RECORD** button to start you recoding instantly.

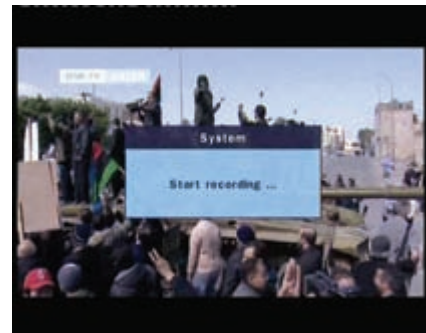

1.3 Recording Edit

During recording, you may press **RECORD** button to edit recording duration time. As it defaulted to 2 hours but you may increase or decrease as you desire.



1.4 Long Time Recording

During long time recording process 4GB or more, additional files may be created every 4GB. (For example; aaa.ts, aaa.ts1, aaa.ts2... and so on) You must remember not to erase any of duplicated file. These files are only able to view with your PC not with receiver.

1.5 Pause during Recording


- When **PAUSE** button is pressed during recording, only the live video is paused, but recording is continued at the external USB2.0 storage device.



- Press **PAUSE** button once again and event will resume from the pause time.



- During recording, press **PLAY/TIMESHIFT** button to show Play bar screen.

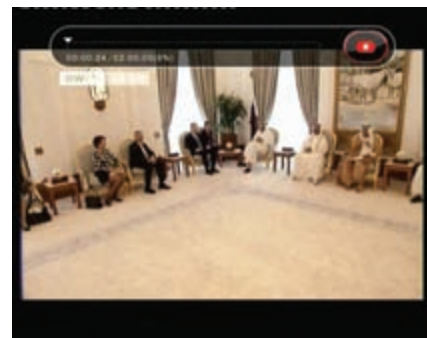

- While the Play bar is shown on your screen, you may use the **LEFT/RIGHT ARROW** button to move (forward & backward) freely within recorded time.



- If you press **STOP** button, it will go to LIVE and you may press **PREV FILE** button to view recorded file from the beginning.

2. Time Shifting

- Press **PAUSE** button to pause the live TV but will continue to record to external USB2.0 storage device.



- Press **PAUSE** button once again and event will resume from the pause time.



- While watching live TV, press **PLAY/TIMESHIFT** button to show the play bar on your screen.






- When the play bar is displayed on your screen, you may use the **LEFT/RIGHT ARROW** buttons to move freely through recorded times.



- If you press **STOP** button while time-shifting, screen will be turned to live TV channel. You can also use **PREV FILE** button to move to a start location of Time-shifted file.

3. Playback (Play List)

- Press the **PLAY LIST** button to activate the Play List screen.
- In Play List you may choose any of pre-recorded event(s) and play it by pressing **OK** button.
- In Play List screen, you may press **RED** button to choose the event you wish to view in order listed in Play List. And, you may press **GREEN** button to choose all event in the Play List.
- In Play List screen, **BLUE** button to delete or rename already recorded event.
- In Play List screen, press **RIGHT/LEFT ARROW** button to change other list. (MP3 Player, Image Viewer)

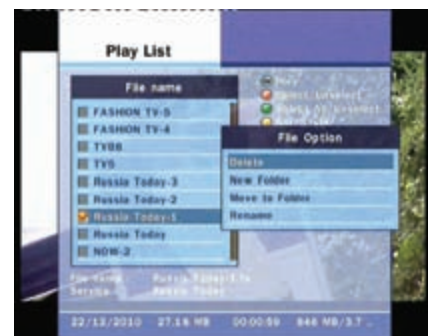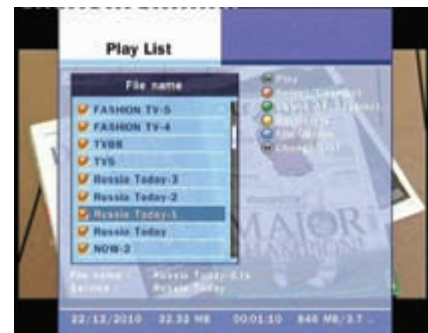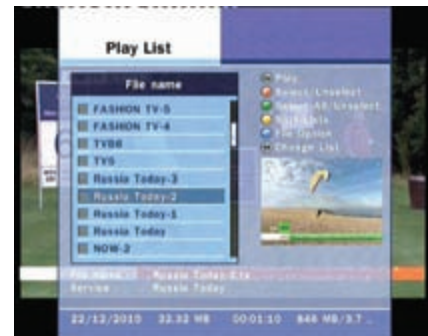

4. Bookmark

- When Play bar is displayed, you may move to desired time and book mark it by pressing the **RED** button. Bookmark(s) are indicated with Green line on the play bar.
- Also, you may press **RED** button to activate play bar to mark your bookmark(s).



- When the play bar is on, User can move / jump between the bookmarks by pressing the **GREEN** button.



- If you wish to delete any Bookmarks, go to that bookmark by pressing green button, then press **RED** button to delete the current bookmarks.



5. Trick mode

- During play, press the **FAST FORWARD** button once to 2X faster than regular playing speed and once more to 3X faster.
- During play, press the **REWIND** button once to 2X faster than regular paying speed.



Guide of Main Menu

To display the menu, press **MENU** button at any time. You can select the sub menu using **ARROW** buttons. The selected sub menu becomes highlighted. When you have selected the sub menu you want, press the **OK** button. If you want to return to the previous menu, press the **MENU** button. And if you want to exit from the menu, press the **EXIT** button.



1. Configuration

1.1 Time Setting

● Time Setting :

To set the current time, you can use two modes; Auto and Manual.

Auto Time Setting

- **Local Offset** : Enter the offset value using the standardized information of current service area.
- **Daylight Saving** : If you want to apply daylight saving, select the country using **ARROW** buttons.

Manual Time Setting

- **Date** : Enter the calendar date by using **ARROW** buttons then press **OK** to finish.
- **Time** : Enter the time by using the **NUMERIC** buttons.



● Clock Mode :

Select the type of clock display(12 Hours or 24 Hours) using **ARROW** buttons.

● Wake Up Mode :

Enter the time for the receiver to automatically power ON.

And you can choose one of Wake Up Mode as '*off*' or '*Once*' or '*Daily*' or '*Weekly*'.

- **Wake Up Date** : Select the date when STB is turn on. Press **OK** button to display calendar.
- **Wake Up Days** : Select a day of the week when STB is turn on.
- **Wake Up Time** : Enter the turn-on time of STB using **NUMERIC** buttons.
- **Wake Up Service** : Select the service when STB is turn on. Press **OK** button to display service list.


● Sleep Mode :

- **Sleep Date** : Select the date when STB is turn off. Press **OK** button to display calendar.
- **Sleep Days** : Select a day of the week when STB is turn off.
- **Sleep Time** : Enter the turn-off time of STB using **NUMERIC** buttons.

1.2 Timer Manager

Insert a new timer entry or modify the existing timer entry.

- **To add new timer entry** : Press **GREEN** button. Timer Edit window will popup. You can set the specific start date, time, duration and service for its reservation. And you can choose one of Timer Modes as '*Once*' or '*Daily*' or '*Weekly*'. You can choose timer operation type as '*Recording*' or just to '*Play*'.
 - If you choose '*Recording*', it will start recording at that time.
 - If you choose '*Play*', it will change and tune to the service that you wish to watch.

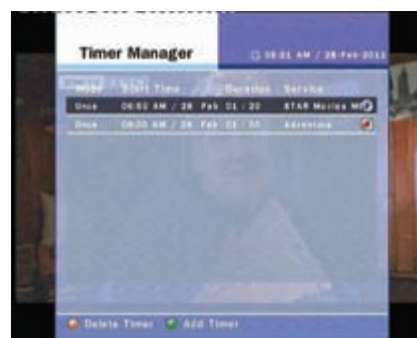

- **To modify existing timer entry** : Choose the timer entry which you wish to modify and press **OK** button.
- **To delete existing timer entry** : Choose the timer entry that you want to delete and press **RED** button.

***NOTE** : If you reserve one or more event through the EPG menu, the reserved event(s) will be added to Timer Manager automatically.*

1.3 UI (User Interface) Setting

- **OSD Transparency** : Set a the OSD transparent type.
- **Info Box Position** : Set the information window position.
- **Info Box Display Time** : Set the display duration of volume bar displayed on the screen after changing volume.
- **EPG OSD Type**:
 - **Set 'Transparent'** : If you press EPG button, selected service will be played in the background of EPG window.
 - **Set 'Picture in Graphic'** : If you press EPG button, selected service will be played within the small box.
- **EPG Time Range** : You can set the time range which is displayed at the same time in the EPG window.
- **Zapping Mode**: You can set the zapping mode. Black screen means display the black screen when channel changed. Freeze means display the last picture when change.




1.4 Parental Control

Access to services and programs is controlled by a 4-digit secret code that is defined by the user. Whenever you attempt to access parental control menu, the pop-up window will instruct you to input a PIN code.(If necessary, you can change it.)

***NOTE** : The default PIN code is '0000'*

- **Censorship** : Set the parental guidance rating of highlighted censorship classification. The parental level is given as age-based numbers.
- **Change Pin code** : To change your PIN code, input the new PIN code using **NUMERIC** buttons. To verify the new PIN code, input the new PIN code again.
- **System** : Set the access rights to system menu.
- **Installation** : Set the access rights to Installation menu.
- **Configuration** : Set the access rights to Configuration menu.
- **Edit Service** : Set the access rights to Edit Service menu.

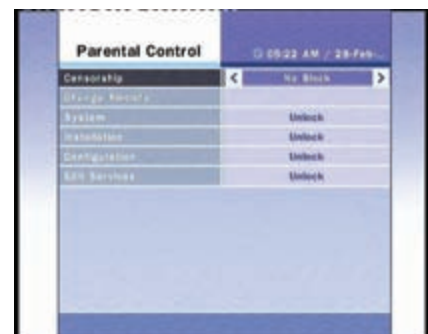


1.5 Language Setting

- **Menu Language** : Select the desired menu language by using the **ARROW** buttons.


NOTE : The Kind of languages can be changed depending on the country sold. Available languages are subject to change without prior notice.

- **Audio Language** : Select the default language for audio when changing services. If no other language is provided, then the default language of current will be automatically selected.
- **Subtitle Language** : Select the default language for subtitle when changing service.

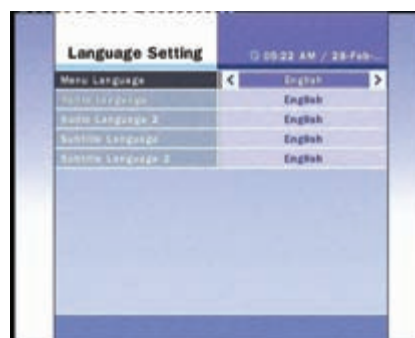

1.6 A/V Output Setting

- **TV Type** : Select the TV types.(**PAL/NTSC/Auto**) In Auto mode, the STB is automatically selected as NTSC or PAL according to the service played.
- **TV Aspect Ratio** : Select the aspect ratio of TV which is connected to STB.(4:3/16:9).
- **Display Format** : Select the format which the video is to be displayed on screen. (Letter Box/Pan Scan) In case of 16:9 mode, this option is not available.
- **Sound Mode** : Set the audio mode which is output from the RCA jack. (**Stereo/Mono/Left/Right**).
- **RF Type** : Select the RF type. (PAL G/I/K)
- **RF Service** : Select a RF service. (21~69)
- **Picture Adjust** : Adjust brightness, contrast and color of screen.

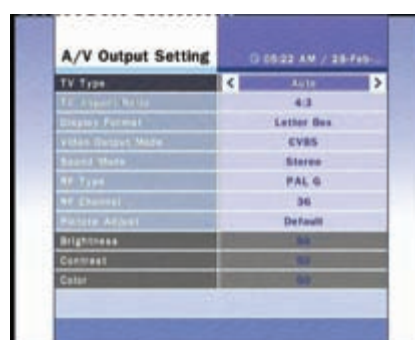


2. Installation

2.1 Dish Setting

Select the antenna and LNB settings for service search. The values that are set in this menu will be available for selection in other service searching menus.

- **Satellite** : Select the satellite which you want to search the service.
 - Press the **LEFT/RIGHT ARROW** button to select the satellite.
 - Select the wanted satellite name.
 - If the desired satellite name is not listed then select User Defined.
- **Frequency** : Select frequency what you want to check the signal.
- **LNB Power** : Select the LNB power.
- **LNB Type** : Select the LNB type.
- **LNB Frequency** : Select the L.O. frequency that is set to antenna.

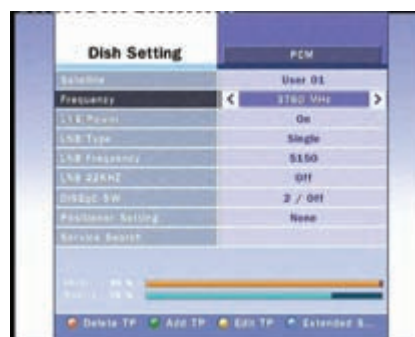

- Use the **LEFT/RIGHT** buttons to select the LNB frequency.
- **Loop-Through** : If the required LNB frequency is not listed, then enter the frequency manually using the **NUMERIC** buttons.
- When you select Universal in LNB type, both 9750 and 10600 are supported at the same time. And LNB 22KHz setting is disabled.

- **LNB 22 Khz** : When you use a dual LNB or two antennas connected to a 22 KHz tone switch box, make 22 KHz
- **DiSEqC 1.0** : If you use a DiSEqC 1.0 switch, select one of the DiSEqC inputs.
- **DiSEqC 1.1** : If you use a DiSEqC 1.1 switch, select one of the DiSEqC inputs.
- **Service Search** : Press **OK** button to move to Service Search menu directly.

2.2 Positioner Setting


- **Satellite** : Select the satellite which you want to search the Service.
 - Press the **LEFT/RIGHT ARROW** button to select the satellite.
 - Select the wanted satellite name.
 - If the desired satellite name is not listed then select User Defined.
- **Frequency** : Select frequency which you want to check the signal.
- **Positioner** : Select the positioner
 - **None** : (No Positioner)



- Using DiSEqC 1.2 :

Move : To move the dish, press **LEFT/RIGHT** button.

Positioner Command : To use various positioner command, press **OK** button. Then, available positioner commands will appear.

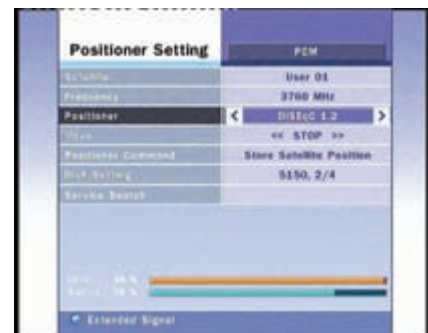


- Using USALS :

Move : To move the dish, press **LEFT/RIGHT** button.

Dish Longitude : Enter the longitude using the **NUMERIC** buttons.

Dish Latitude : Enter the latitude using the **NUMERIC** buttons.

Go To : Press **OK** button to rotate the dish to the configured position.

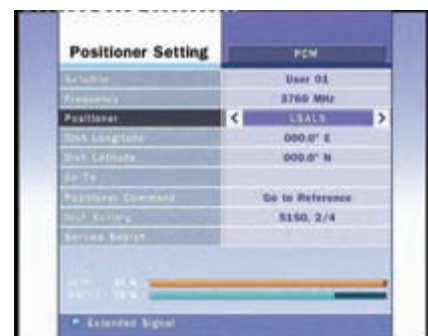

- **Dish Setting** : Press **OK** button to move to *Dish Setting* menu directly.
- **Service Search** : Press **OK** button to move to *Service Search* menu directly.

2.3 Service Search

- **Satellite** : Select the target satellite for search.
- **Search Mode** : Select the following search mode.

Auto Search Mode

- **Satellite** : Press **OK** button to select the target satellite for search.
- **Search Type** : Select the search type.
- **Network Search** : You can select Off or On. When you select 'On', you can find more transponders using the home network. As it refers to NIT during searching, if there is the frequency information of other transponder, it searches the other transponder besides the transponder that the user inputs.
- **Dish Setting** : Press **OK** button to move to Dish Setting menu directly.
- **Positioner Setting** : Press **OK** button to move to Positioner Setting menu directly.
- **Start Search** : Press **OK** button to start search.



Manual Search Mode

- **Frequency** : Select the frequency from the list to search.
- **Symbol rate** : Enter the symbol rate using the **NUMERIC** buttons.
- **Polarity** : Select the polarity. (**Vertical/Horizontal**)
- **Search Type** : Select the search type.
- **Network Search** : You can select Off or On. When you select 'On', you can find more transponders using the home network. As it refers to NIT during searching, if there is the frequency information of other transponder, it searches the other transponder besides the transponder that the user inputs.
- **Start Search** : Press **OK** button to start search
- **Dish Setting** : Press **OK** button to move to Dish Setting menu directly.




Blind Search Mode

- **Frequency** : Set Auto to search whole frequency, Set Manual to search only desired frequency.
- **Polarity** : Select the horizontal or vertical polarization you wish to search.
- **Search Type** : Select the search type.
- **Start Search** : Press **OK** button to start search.
- **Dish Setting** : Press **OK** button to move to Dish Setting menu directly.




Advanced Search Mode

- **Frequency** : Select the frequency from the list to search.
- **Symbol rate** : Enter the symbol rate by using the **NUMERIC** buttons.
- **Polarity** : Select the polarity. (**Vertical/Horizontal**)
- **Video PID** : Enter the video PID using the **NUMERIC** buttons.
- **Audio PID** : Enter the audio PID using the **NUMERIC** buttons.
- **PCR PID** : Enter the PCR PID using the **NUMERIC** buttons.
- **Start Search** : Press **OK** button to start search.

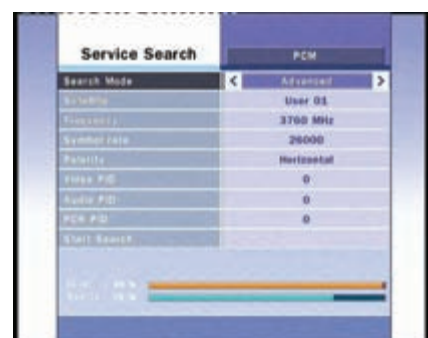

2.4 System Recovery

- **System restore to factory default** : This menu allows you to restore the factory set values in case the user has encountered some problems after changing any new parameters of service data and others which may be in error. Press **OK** button to erase all services and restore default setting.
- **System restore to stored position** : This menu allows you to restore the stored values including service data and system parameters. Press **OK** button to restore all data.
- **Store system data** : If you want to use system parameters and service data in the future, this menu allows you to store current state. Press **OK** button to store current state.

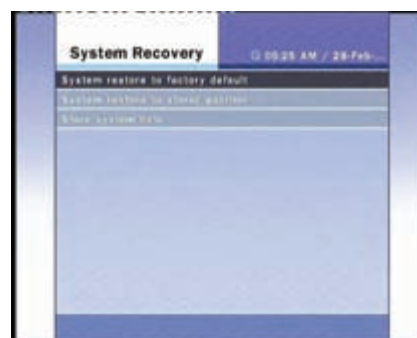


2.5 System Information

This menu displays general information about the hardware and software version of your receiver.

3. Utilities

3.1 USB

- **MP3 Player** : Stick the external USB memory into the provided USB port on front panel. Once inserted, press **OK** button to read external USB memory stick and choose the MP3 file from the window you want to play. Press **INFO** Button to show the **ID3 tag** information.

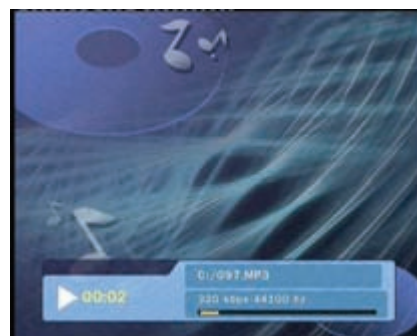

- **Image Viewer** : You can display the image file that is in the external USB memory stick on the screen. Select the image file(JPEG format) and press **OK** button to display the image.



- **Playlist** : You can play the recorded file that is in the external USB memory stick on the screen (Refer to Play List)
- **Format** : Before you use your USB external device, we recommend for you to format it by Format(USB) menu.

NOTE : If you execute format, all data will be deleted.

3.2 Data Transfer


- **Transfer all System data to USB storage** : If you want to transfer and use BOTH of the current system parameters and service data in the future, this menu will allow you to store both data to your USB device. Press **OK** button to store current data to external USB storage.
- **Transfer Service data to USB storage** : If you want to transfer and use ONLY the service data in the future, this menu allows you to store current service data. Press **OK** button to store the current service data to your external USB storage.
- **Data download from USB storage** : This menu allows you to download the stored data from the external USB storage to your STB. Press **OK** button to download data.



3.3 Recording Option

- **Recording Stop Message** :
 - **Set 'On'** : When you press **STOP** button in recording, confirm window is displayed.
 - **Set 'Off'** : When you press **STOP** button in recording, STB will stop recording immediately with no message.
- **Time Shift(USB)** :

You can adjust the time such as 30 Min / 60 Min / 120 Min.
In this case, time shifting function works automatically up to time you set, if external USB device have enough space. If you set 'off' this option, time shifting function never works.

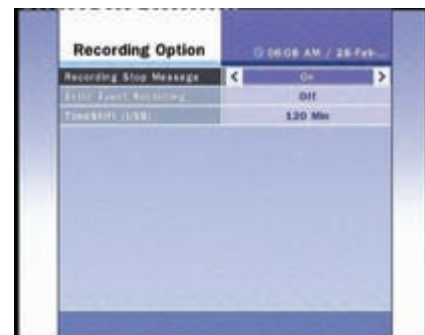


3.4 Calendar

To display calendar, press **OK** button. Utilize **ARROW** buttons to choose the date. If you press **PAGE UP/DOWN** button, you can see past/next month of calendar.



3.5 Calculator

To use a calculator, press **OK** button.

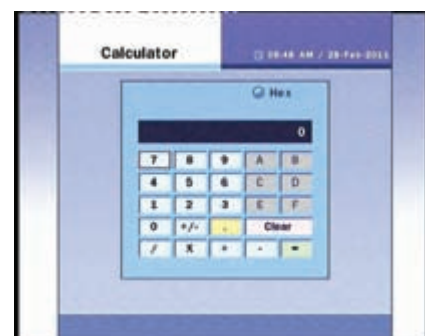

3.6 Game

You can enjoy Games. (CAKEPIA, TETRIS)


If you want to play the Game, select the Game with **UP/DOWN** buttons and press **OK** button.

4. CA

4.1 Conax smart card menu

To watch scrambled services, you need to have a appropriate Conax smart card from the service providers.


- Insert a valid smart card into smart card slot.
- The message of 'Smart card Initializing...' will appear on the screen.
- After message disappear, you can watch the service you want.

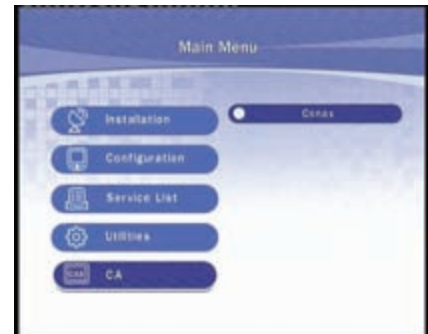

4.2 Smart card information

You can view the current status of smart card.

- Select the slot what you want to view using **ARROW** buttons. And press **OK** button.

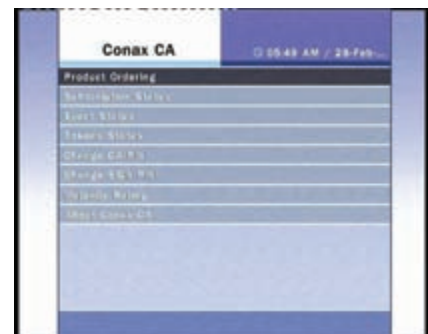

5. Service List

5.1 Service List manager

Service List Manager menu will be appeared when press **OK** button.

You can select Edit Mode by press **YELLOW** button.


- **Lock Services** : All service lists will be shown on left side of window, right side will show make service to be lock. By using **ARROW** and **OK** button you may move the chosen service to right side window to lock service.



- **Move Services** : All Service Lists will be shown on left window, Service Lists for moving will be shown on right Window. Move the Service to Right window by using **ARROW** and **OK** button, then right window services will be moved to related location when select desired location from the left window.




- **Delete Services** : All service lists will be shown on left side of window. By using **ARROW** and **OK** button you may select services to be delete. And press **GREEN** button to delete the selected services.

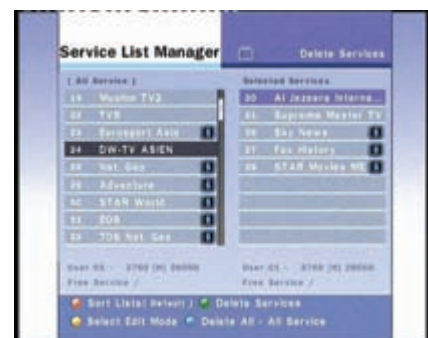

- **Skip Services** : All service lists will be shown on left side of window, right side will show make service to be skip. By using **ARROW** and **OK** button you may move the chosen service to right side window to skip service.



- **Set Favorite Services** : Press **FAV** button to mark the favorite group list. Once, favorite group is chosen, left side window will show all service list marked and right side window will show only the marked service list. Using **ARROW** and **OK** buttons you may add any service to the favorite group or delete any service from the favorite group.

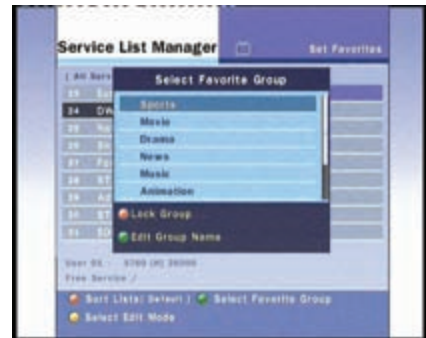

- **Edit Services** : All service lists will be shown on left side of window. Move the highlighted bar to the service what you want to edit its name and press **OK** button. Then you can see the virtual keyboard. Using **ARROW** and **OK** buttons, you can edit the service name.



5.2 Service List Option

- **Service List Preview :**

- **Setting 'ON'**

If you change service using **ARROW** buttons and press **OK** button in the Service List, service will be played which you want. But Service List still remains. To remove Service List on screen, press **OK** one more time.

- **Setting 'OFF'**

If you change service and press **OK** in the Service List, service will be played. And Service List disappears at the same time.



- **Service List Slide Popup :**

- **Setting 'ON'**

When you press **RED** or **GREEN** button in the Service List, pop-up window appears with slide-open effect.

- **Setting 'OFF'**

In the Service List, pop-up window is opened with no effect.

- **Lock Favorite Popup :**

- **Setting 'ON'**

If you press **GREEN** button to open Set Favorite menu, you must enter PIN code.

- **Setting 'OFF'**

PIN code is not required.

- **View Only Filtered List :**

- **Setting 'ON'**

If you sort services with any category (A~Z, Transponder, Group or CAS) in the Service List, only filtered services will be shown on the Service List.

- **Setting 'Off'**

All services will be shown on the Service List. And filtered services are highlighted with yellow color.

Troubleshooting

Problem	Solution
Does not display any message on the front panel.	<ul style="list-style-type: none"> ✓ Check the main power cable and check that it is plugged into a suitable power outlet. ✓ Check you have switch the STB main power switch ON at the rear of the STB.
No Picture	<ul style="list-style-type: none"> ✓ See 'Does not display any message on the front panel' above. ✓ Check the video output port is firmly connected to the TV or VCR. ✓ If you are using the RF output, check that the RF lead is connected firmly to the STB and TV/VCR. ✓ Check that you have selected the correct channel or Video Output on your TV. ✓ If you are using the RF Output, check that you have correctly tuned the UHF channel of the STB or TV. ✓ Check the brightness level of the TV
Poor picture quality	<ul style="list-style-type: none"> ✓ See 'No Picture' above. ✓ Check the signal level, if this is low then try adjusting the alignment of your dish.
No Sound	<ul style="list-style-type: none"> ✓ See 'No Picture' above. ✓ Check the volume level of the TV and STB. ✓ Check the Mute status of the TV and STB.
Remote Control does not operate	<ul style="list-style-type: none"> ✓ Point remote control directly towards the STB. ✓ Check and replace batteries.
No or Bad Signal	<ul style="list-style-type: none"> ✓ Check the LNB ; Replace LNB if necessary. ✓ Check the cable from the LNB. ✓ Check the position of the dish; realign dish if necessary. ✓ If you are using a DiSEqC 1.0 switch, check that you have connected the LNBs to the correct connections on the switch. ✓ Check the 'Signal Level' and the 'Signal Quality'.

Specifications

Tuner & Channel Decoder

Input Connector	F-type, IEC 169-24, Female
Loop through out	F-type, IEC 169-24, Female
Frequency Range	950MHz ~ 2150MHz
Input Impedance	75Ω, unbalanced
Signal Level	-65 to -25dBm
LNB Power	13/18VDC, max.400mA
22KHz Tone	(22±2)KHz, (0.6±0.2)V
DISEqC Control	V1.0/1.2/USALS Compatible
Demodulation	QPSK
Input Symbol Rate	2 ~ 45 Ms/s
FEC Decoder	1/2, 2/3, 3/4, 5/6 and 7/8 with Constraint Length K=7

MPEG Transport Stream A/V Decoding

Transport Stream	MPEG-II ISO/IEC 13818
Profile Level	MPEG-II MP@ML
Input Rate	Max. 15Mbit/s
Video Formats	4:3 LetterBox, 4:3 PanScan, 16:9
Video Resolution	720 x 576, 720 x 480
Audio Decoding	MPEG/MusiCam Layer I & II
Audio Mode	Stereo/Joint stereo/Mono
Sampling Rate	32KHz, 44.1KHz and 48KHz

Main System

Main Processor	Conexant Virgo
Memory	Flash-ROM : 2 MBytes SDRAM : 32 MBytes

Audio / Video & Data IN/OUT

TV SCART	RGB, CVBS Video, Audio L, R Output
VCR SCART	CVBS Video, Audio L, R Output RGB, CVBS, Audio L, R Input
RCA	CVBS Video Output, Audio L, R Output
S/PDIF	Digital Audio Output (Coaxial)
RS-232C	9 pin D-SUB (Male) type, Transfer rate 115Kbps
USB	USB 2.0 Host Support (5 Vdc 500 mA max)

RF Modulator

RF Connector	75Ω, IEC 169-2, Male/Female
Frequency	470 ~ 860MHz
Output Channel	CH 21 ~ 69 for the Remodulator
TV Standard	PAL G/I/K Selectable by Menu
Preset Channel	CH 36 (or TBD) Software changeable by Menu

Front Panel

Slot	1 Smart Card Slot 1 USB Host Slot
Buttons	7 Buttons (Power, Menu, OK, CH Up/Down, Vol Up/Down)
Display	7-Segment

Power Supply

Input Voltage	AC 100 ~ 250V, 50/60Hz
Type	SMPS
Power Consumption	Max. 25W
Standby Power	Max. 8W
Protection	Separate Internal Fuse & Lighting protection

Physical Specification

Size (W x H x D)	260mm X 55mm X 210mm
Weight (Net)	1.2Kg
Operating Temp.	0°C ~ +45°C
Storage Temp.	-10°C ~ +70°C

SuperMax®

Digital Satellite Receiver

9300 USC